


RTMP Live Stream Settings Instructions

1, System Connections

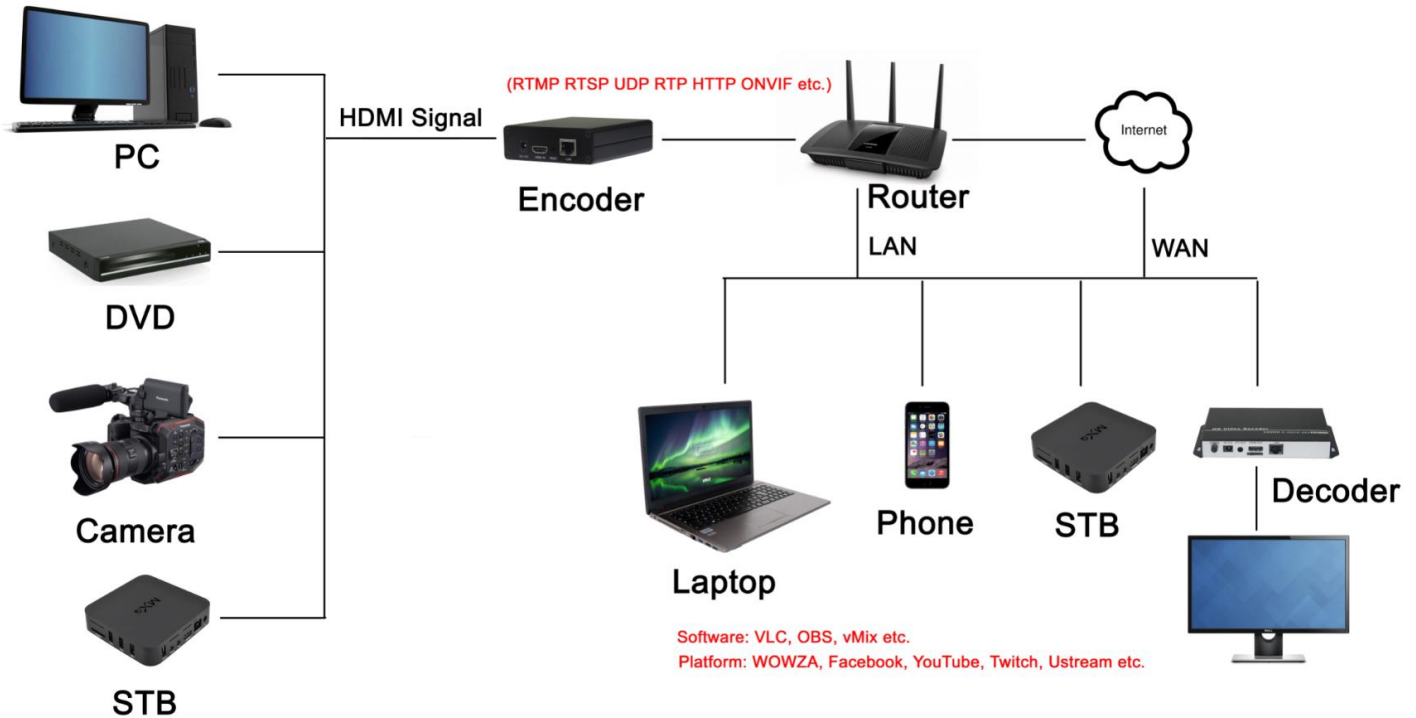

2, Network Settings

Login encoder web, enter “System”--- “Network” interface.

IP: must be same network segment with router (for example: the router IP address is 192.168.1.1, the encoder IP address need to be 192.168.1.x, x is 2~254)

Gateway: same with router IP address

DNS: same with router DNS address or setup to 8.8.8.8

Then enter “Reboot” interface—click “Reboot” to restart encoder.

3, RTMP Settings

Generally, Platform will provide the standard RTMP URL format: **rtmp://A/B/C**,
 A is RTMP server IP, B is RTMP app name, C is RTMP stream name or key.


Enter “Main stream”---“RTMP PUBLISH URL”, fill the RTMP URL info, click “Enable”

Then click “Apply”--- enter “System”---“Reboot” interface—click “Reboot” to restart encoder.

**According 1,2,3 to setup the encoder for live stream on different platforms
 The following is the examples:**


YouTube Live

Login your YouTube account, enter “Live Stream”--- “ENCODER SETUP” to get the RTMP URL and key.

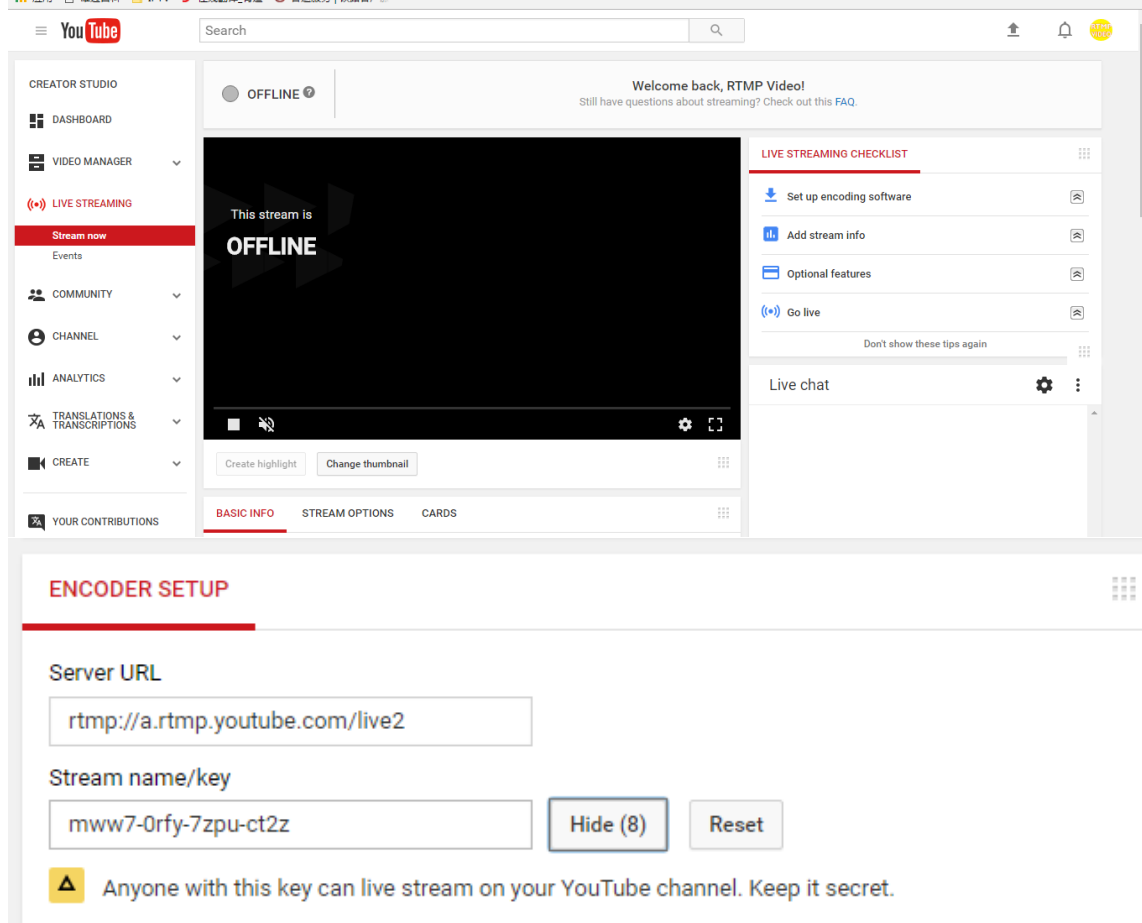

As shown in the picture above, the full RTMP URL is `rtmp://a.rtmp.youtube.com/live2/mww7-0rfy07zpu-ct2z`

Enter encoder RTMP protocol settings, fill RTMP URL info in RTMP setting as the following picture.

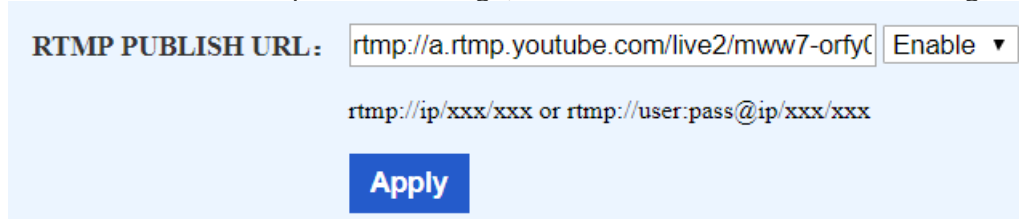


Then click “Apply”--- enter “System”---“Reboot” interface—click “Reboot” to restart encoder.


Facebook Live

Navigate to your Facebook Live settings and combine your “Server URL” and “Stream name/key” Full RTMP URL as the following picture:

rtmp://live-api-a.facebook.com:80/rtmp/170356999674911?ds=1&a=ATgpDqBtuZwMotpn

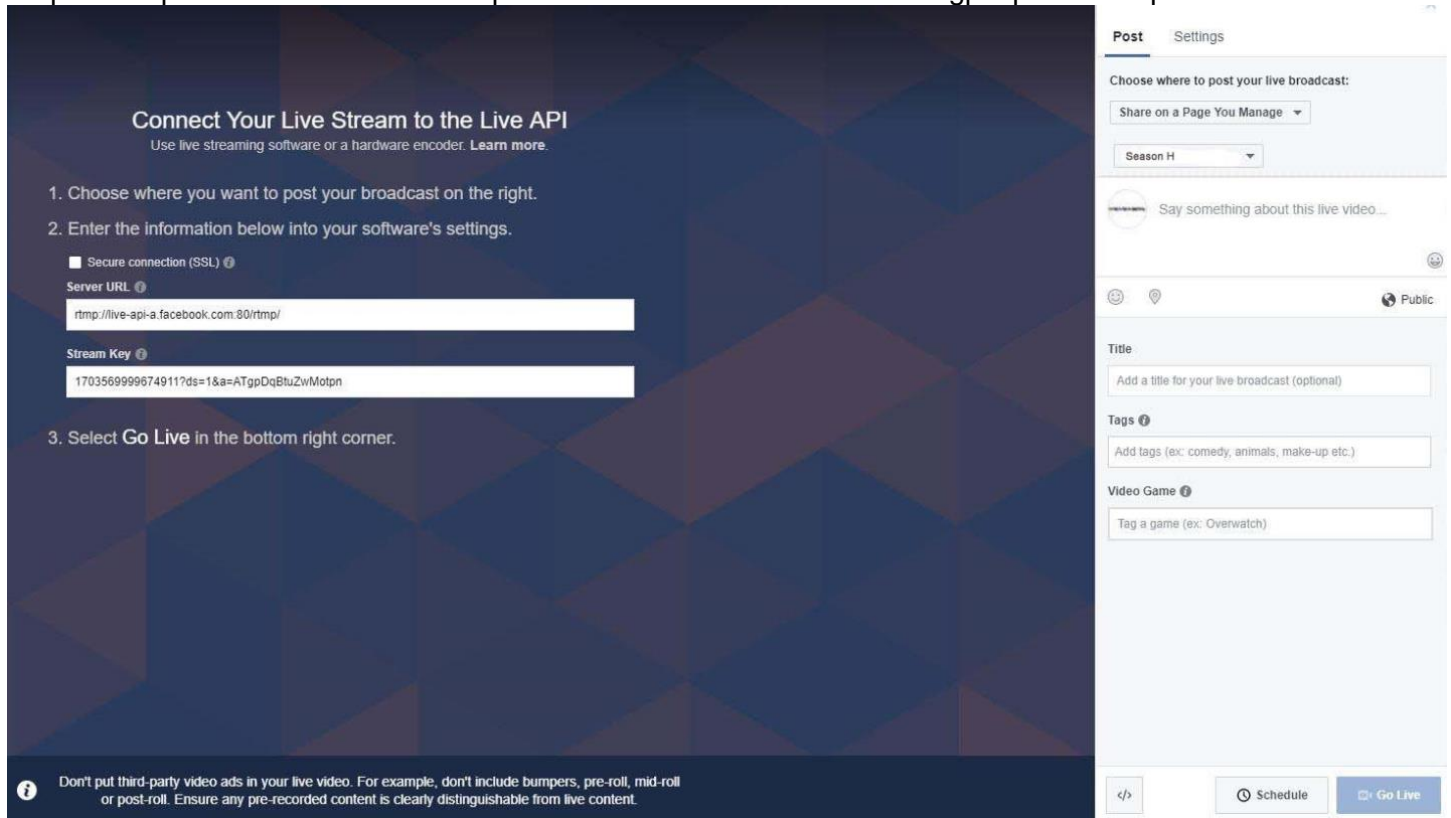

Enter encoder RTMP protocol settings, fill RTMP URL info in RTMP setting as the following picture.

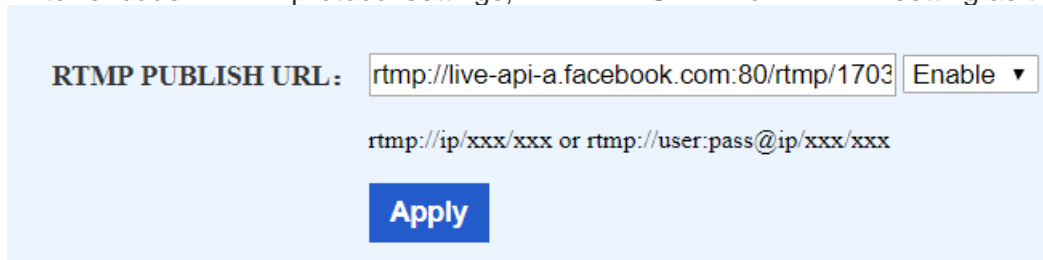

Then click “Apply”--- enter “System”---“Reboot” interface—click “Reboot” to restart encoder.

DaCast

After creating a live channel, navigate to your "Encoder Setup" settings. Look in section 3 for your stream URL settings. The RTMP URL format is **RTMP://(login):(password)@(stream url)/(stream names)**

Get the full RTMP URL from the following picture shows:

rtmp://210350:843103@p.ep195761.i.akamaientrypoint.net/EntryPoint/dclive_1_150@195761

The screenshot shows the 'Encoder Setup' page with three numbered sections:

- 1. PUBLISHING POINT & STREAM QUALITY:** Contains text about auto-detection and stream quality notes.
- 2. SELECT YOUR ENCODER:** Lists various encoder options including OBS Studio By DaCast, Telestream wirecast, vMix, VID Blaster, and a grid of other RTMP encoders like VidiU, CUBE, TriKaster, VBrick, Niagara Video Corporation, touchstream, and ELEMENTAL LIVE.
- 3. START STREAMING:** Provides login details (Login: 210356, Password: 843103) and the RTMP URL: `rtmp://p.ep195761.i.akamaientrypoint.net/EntryPoint`. It also lists stream names (`dclive_1_150@195761`) and backup URLs.

Enter encoder RTMP protocol settings, fill RTMP URL info in RTMP setting as the following picture.

The screenshot shows the 'RTMP PUBLISH URL' configuration field with the following content:

RTMP PUBLISH URL: ▾


`rtmp://ip/xxx/xxx or rtmp://user:pass@ip/xxx/xxx`

Then click "Apply"--- enter "System"---"Reboot" interface—click "Reboot" to restart encoder.


Ustream

Access your Ustream broadcast settings and combine your “RTMP URL” and “Channel Key”
Full RTMP URL as the following picture:

rtmp://1.23493389.fme.ustream.tv/ustreamVideo/23493389/ur84eksfbUCaJZwk77KcGNJB9ReSCGkl

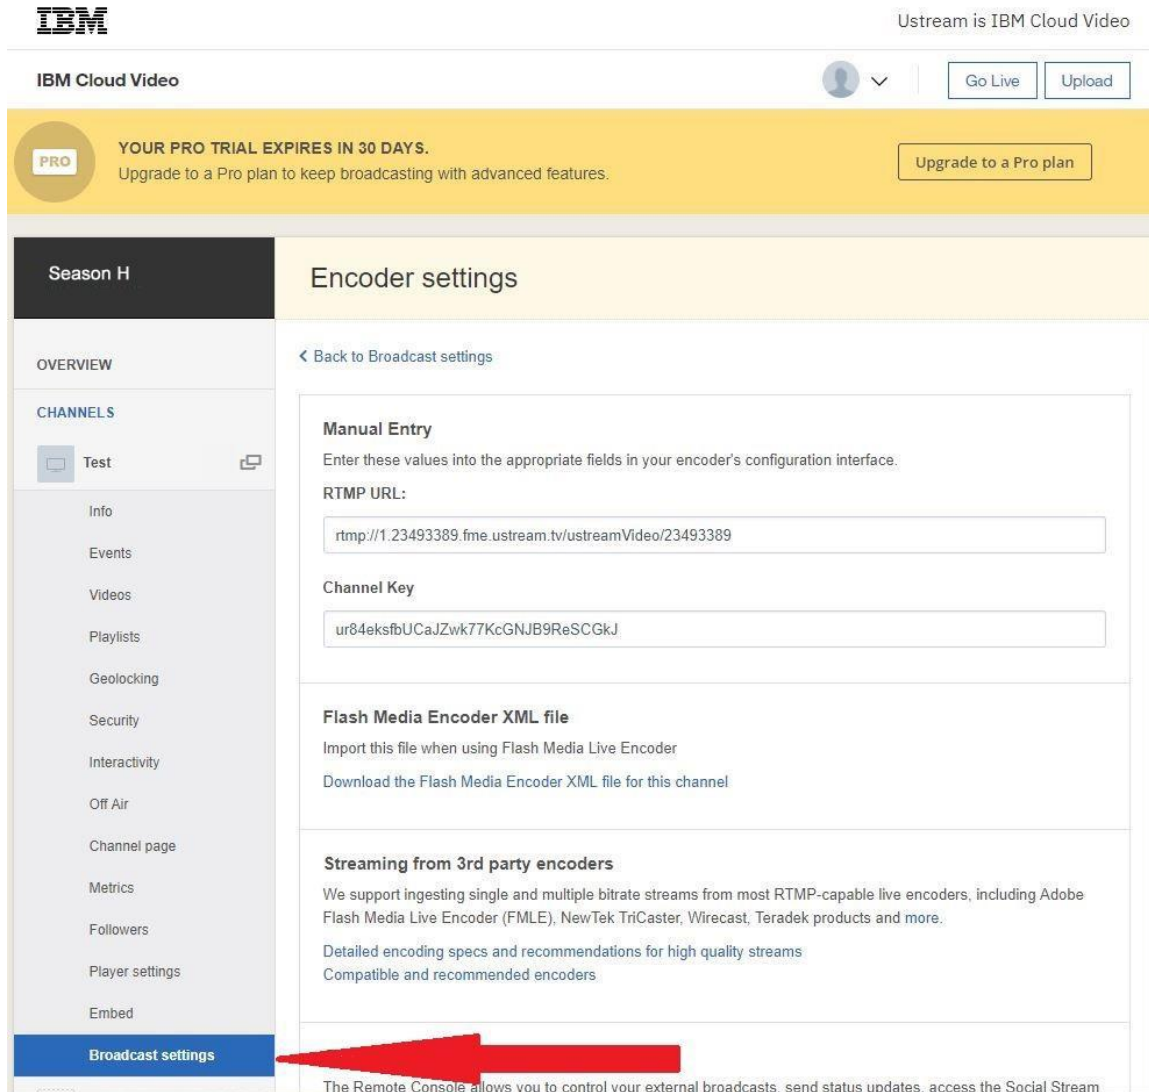

Enter encoder RTMP protocol settings, fill RTMP URL info in RTMP setting as the following picture.

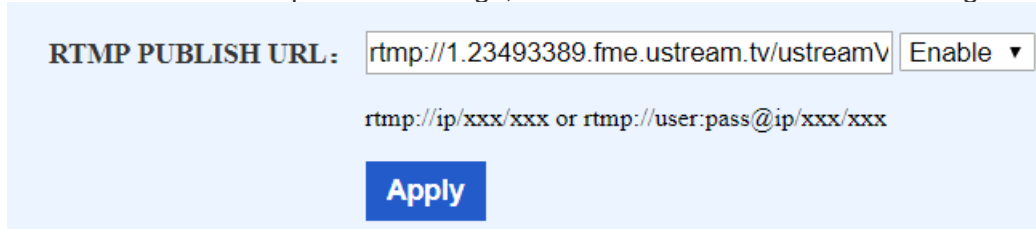


Then click “Apply”--- enter “System”---“Reboot” interface—click “Reboot” to restart encoder.


Twitch

Navigate to your Twitch stream key settings and combine your “Server URL” and “Stream name/key”
Get the Full RTMP URL for example:

`rtmp://live-dfw.twitch.tv/app/live_185463631_mUKOBIbkTefAr3ydfL0gLImvAHO2Dk`

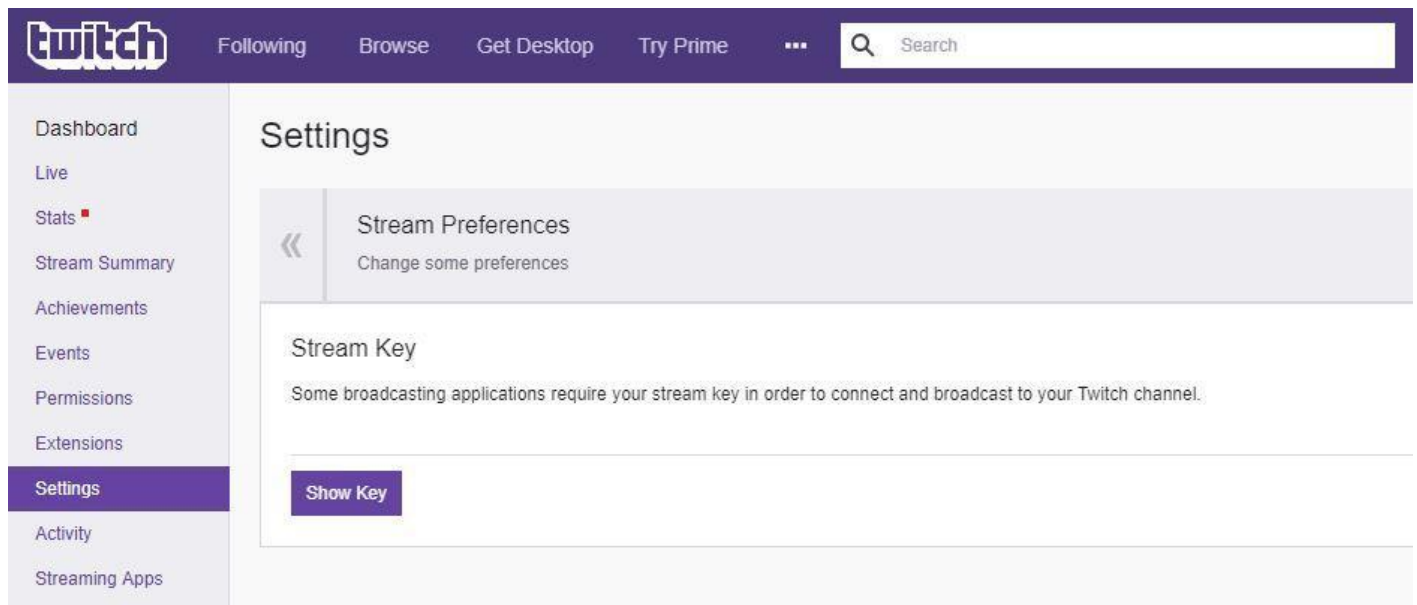

Enter encoder RTMP protocol settings, fill RTMP URL info in RTMP setting as the following picture.

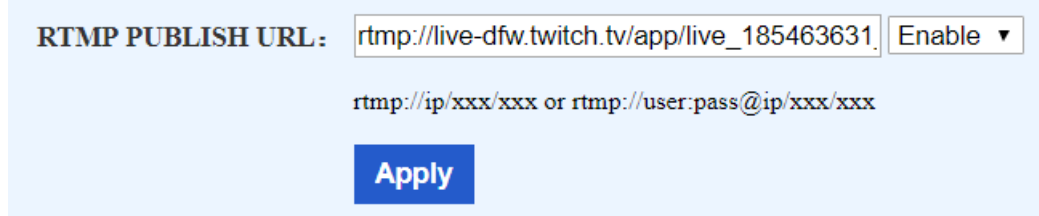

Then click “Apply”--- enter “System”---“Reboot” interface—click “Reboot” to restart encoder.