


Video Encoder Quick User Guide

1, System Connections

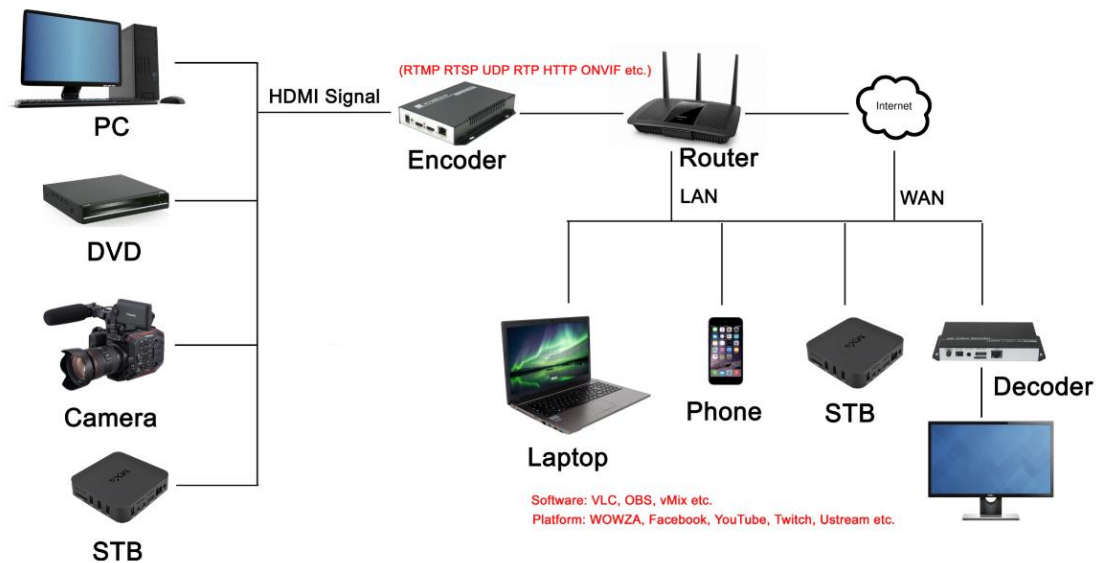

2, Visit Encoder Web

Encoder default IP address: <http://192.168.0.31>, user name and pwd: admin.

Setup your PC IP address in the same network segment with encoder:

On a Windows PC:

Enter "Network and Internet"---"Change adapter settings"--- Right click on your wired ethernet adapter---"Properties"---"Internet Protocol Version 4 (TCP/IPv4)"
Enter the IP address with 192.168.0.90 (2~254 which no conflict in LAN) and Subnet mask 255.255.255.0 --"OK"

